


ASSEMBLY INSTRUCTIONS:

- 1- REMOVE PLASTIC HOUSING AROUND CONTACT BODY.
- 2- STRIP INSULATION AND JACKET ON A #8 AWG WIRE, EXPOSING CONDUCTOR TO LENGTH SHOWN BELOW.
- 3- INSERT WIRE INTO CONTACT BODY.
- 4- CRIMP WIRE AND CONTACT BODY USING SST P/N FP52995 CRIMP TOOL WITH SST P/N FP53007 CRIMP DIE OR EQUIVALENT CRIMPER FOR #8 AWG WIRE.
- 5- SNAP PLASTIC HOUSING BACK AROUND CONTACT BODY UNTIL CLIPS LOCK BACK IN PLACE.

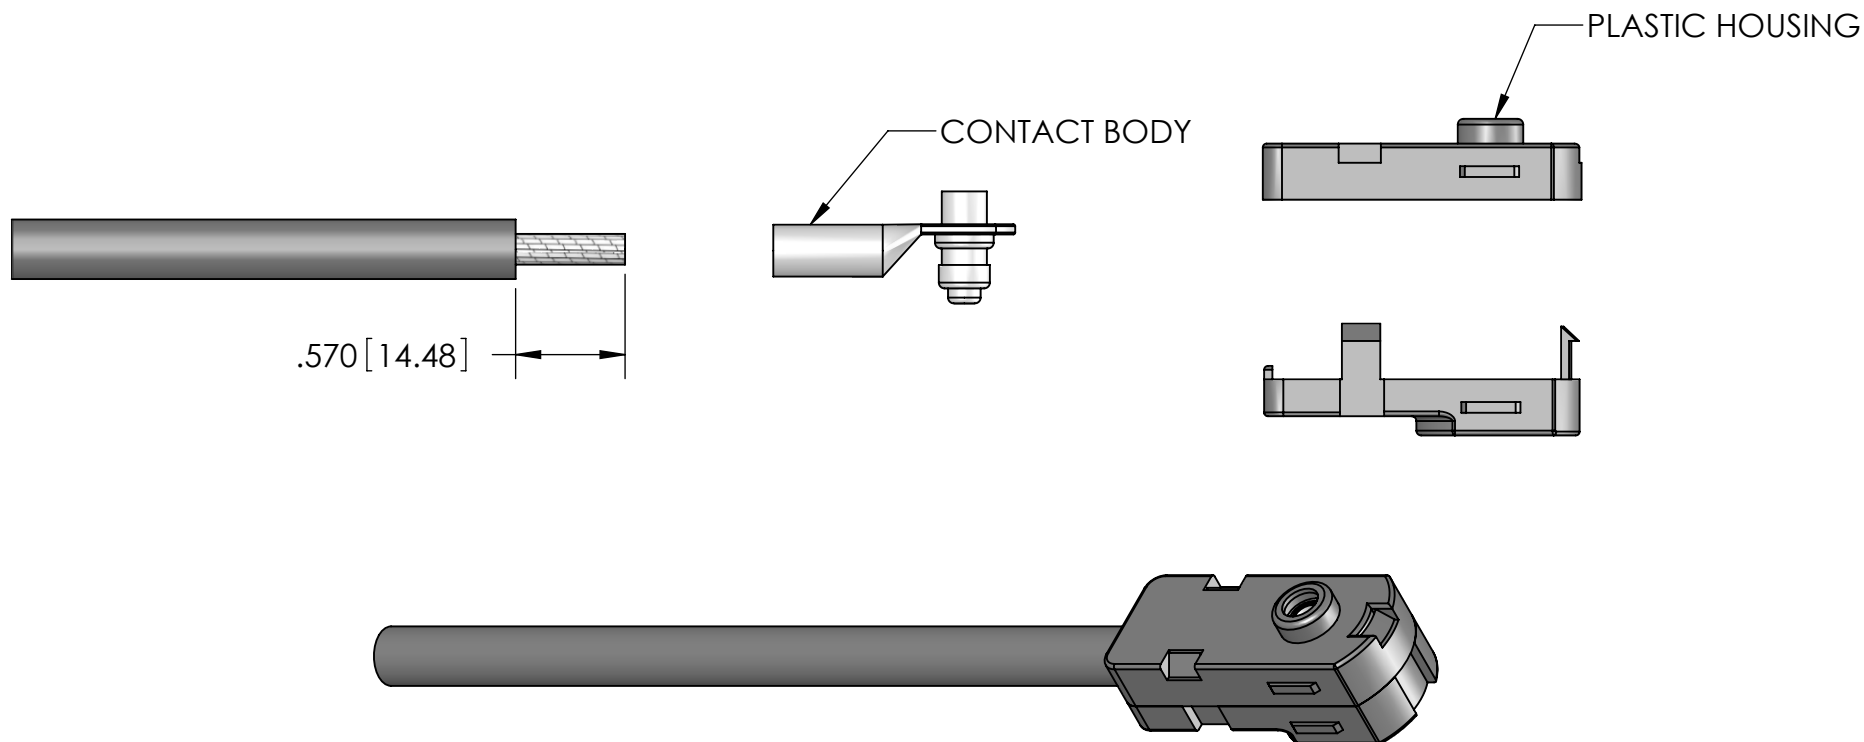

PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF SOLID SEALING TECHNOLOGY. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF SOLID SEALING TECHNOLOGY IS PROHIBITED.				THIRD ANGLE PROJECTION 		TITLE: INSTRUCTION SHEET 8 AWG PUSH ON PLUG				 SOLID SEALING TECHNOLOGY		
REV.	APP'D	DATE	SCALE 1:1	DIMENSIONS IN INCHES [mm]	DRAWN	JS	02/23/2010	NUMBER: NS20087	REV:	A	SHEET 1 OF 1	
A	JF	07/02/2026	MACA0004-11		ENG APPR.	JF	07/02/2026					