


THIS INSTRUCTION SHEET APPLIES TO PLUG FA42256 USED WITH CONTACTS KT41236 OR KT41236-02.

**ASSEMBLY INSTRUCTIONS:**

- 1- STRIP WIRE INSULATION TO EXPOSE .060-.090" [1.53-2.28 mm] OF WIRE CORE. INSERT STRIPPED WIRES THROUGH SKID WASHER AND REAR INSERT. CRIMP WIRE TO CONTACTS. CRIMP USING FP41735 CRIMP TOOL (CRIMP SETTING 5) WITH FP41731 LOCATOR.
- 2- AFTER CRIMPING SEAT CONTACTS INTO REAR INSERT.
- 3- INSERT REAR INSERT INTO FRONT INSERT MAKING SURE THE CONTACTS HAVE FULLY SEATED INTO THE FRONT INSERT. THIS IS VISUALLY CONFIRMED WHEN THE SHOULDERS ON BOTH INSERTS ARE NEARLY TOUCHING.
- 4- INSTALL INSERT ASSEMBLY INTO COUPLING NUT, THEN INSTALL SKID WASHER AND RETAINING RING INSIDE COUPLING NUT.
- 5- CONTACTS ACCEPT A 28-32 AWG WIRE SIZE FOR CRIMP.
- 6- MAXIMUM WIRE INSULATION OD: .030" [0.76 mm]

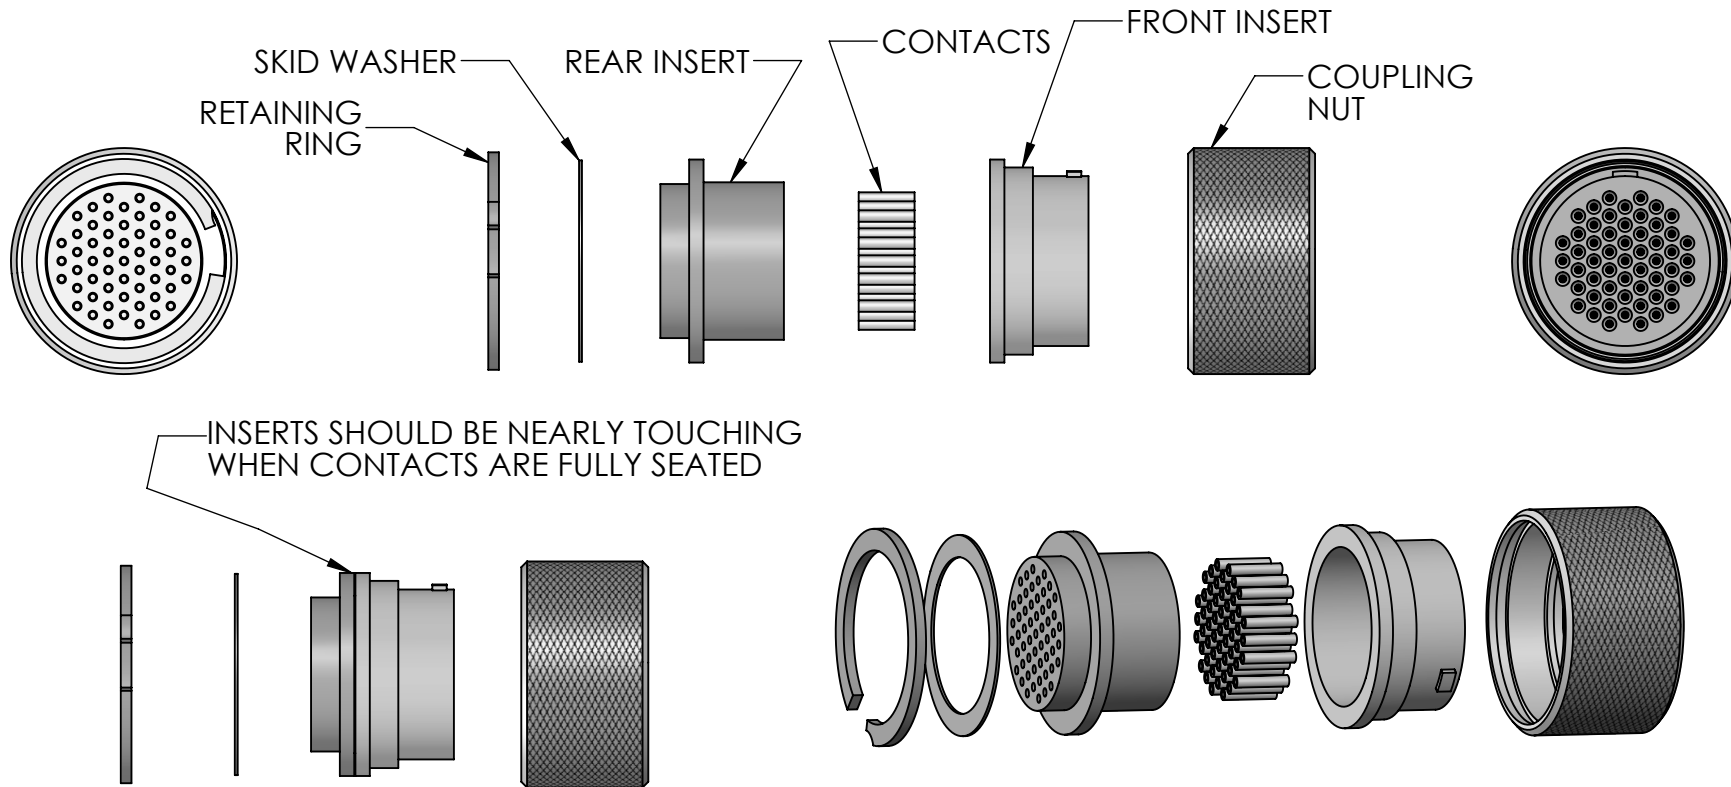

PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF SOLID SEALING TECHNOLOGY. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF SOLID SEALING TECHNOLOGY IS PROHIBITED.				THIRD ANGLE PROJECTION 		TITLE: INSTRUCTION SHEET MICRO C PLUG ASSEMBLY					
REV.	APP'D	DATE	SCALE 1.5:1	DIMENSIONS IN INCHES [mm]	DRAWN	JF	3/29/2021	NUMBER: NS42256	REV:	B	SHEET 1 OF 1
B	JF	04/21/2021	MSPLR004-55WS		ENG APPR.	JF	3/29/2021				